

STANDARD OPERATING PROCEDURE:

AP Tech Solid Chemistry

Product Installation: BOTTLES - PASTE

Products in bottle form come in two ways:

1. Paste (scale/corrosion inhibitor)
2. Granules (biocides)


Bottle Examples



PPE Recommended: safety glasses, nitrile or chemical-resistant gloves

For products that are bottles filled with paste the following procedure can be used:

1. Close the inlet 90 ball valve to the _____
dissolver on the back top right of the unit.

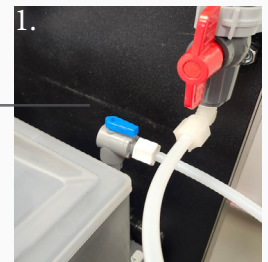

2. Remove clear plastic lid from dissolver.



3. Remove the empty or used bottle from _____
the dissolver and recycle or discard.




4. Remove the entire screen cap assembly _____
from the new product bottle, which
includes a cap.




5. Turn the new bottle upside down with the
opening facing down and slide gently into
the dissolver bowl.



6. Open the inlet 90 ball valve to the _____
dissolver.

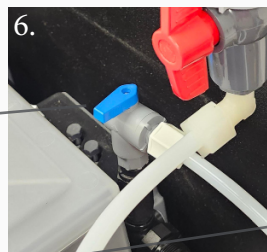

7. Replace clear plastic lid.

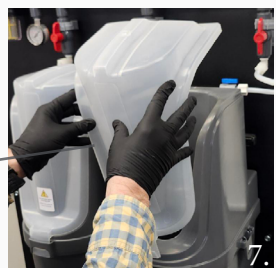

STANDARD OPERATING PROCEDURES:

Product Installation: BOTTLES - GRANULAR

Products in bottle form come in two ways:

- 1. Paste (scale/corrosion inhibitor)
- 2. Granules (biocides)

Bottle Example - Granular



PPE Recommended: safety glasses, nitrile or chemical-resistant gloves

For products that are bottles filled with granular the following procedure can be used:

- 1. Close the inlet 90 ball valve to the dissolver on the back top right of the unit.
- 2. Remove clear plastic lid from dissolver.
- 3. Remove the empty or used bottle from the dissolver and recycle or discard.
- 4. Remove just the cap from the screen cap leaving the screen cap securely in place.
- 5. Turn the bottle upside down with the opening facing down and slide gently into the dissolver bowl.
- 6. Open the inlet 90 ball valve to the dissolver.
- 7. Replace clear plastic lid.



STANDARD OPERATING PROCEDURES:

Product Installation: DISCS

PPE Recommended: safety glasses, nitrile or chemical-resistant gloves

Disc Example



For products that are discs the following procedure can be used:

- 1. Close the inlet 90 ball valve to the dissolver on the back top right of the unit.
- 2. Remove clear plastic lid from dissolver.
- 3. Remove and discard the clear plastic covering from the disc.
- 4. Before placing disc in dissolver, remove the black plastic diverter (see next step).
- 5. Gently place disc (or discs) into dissolver (up to 4). Place black plastic disc diverter on top of the top disc.
- 6. Open the inlet 90 ball valve to the dissolver.
- 7. Replace clear plastic lid.

